


POP UP ANCHOR

Part Number 153169

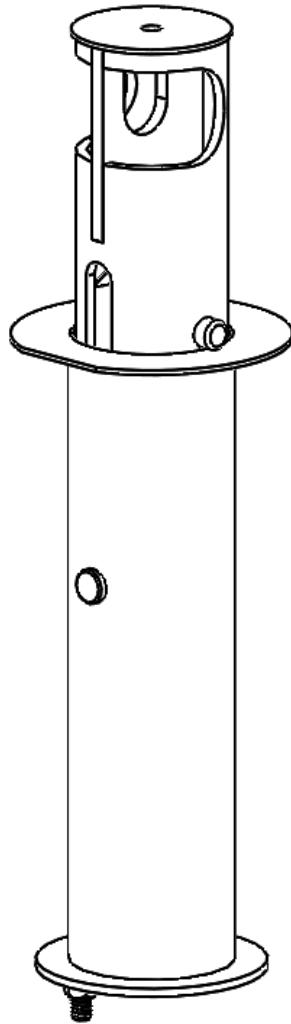



SPECTRUM[®]
Aquatics
A **PLAY**CORE Company

7100 Spectrum Lane ~ Missoula MT 59808
800.791.8056 ~ www.spectrumproducts.com

You have purchased a Spectrum Products Pop Up Lane Rope Anchor. Providing the unit is installed correctly and properly maintained, it will furnish you with many years of trouble free use. It is important to read this entire manual prior to beginning installation.

Each unit will arrive fully assembled. Before accepting the unit from the carrier, inspect for visible damage. Spectrum is not responsible for lost or damaged freight.

Components and Hardware

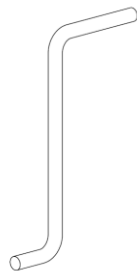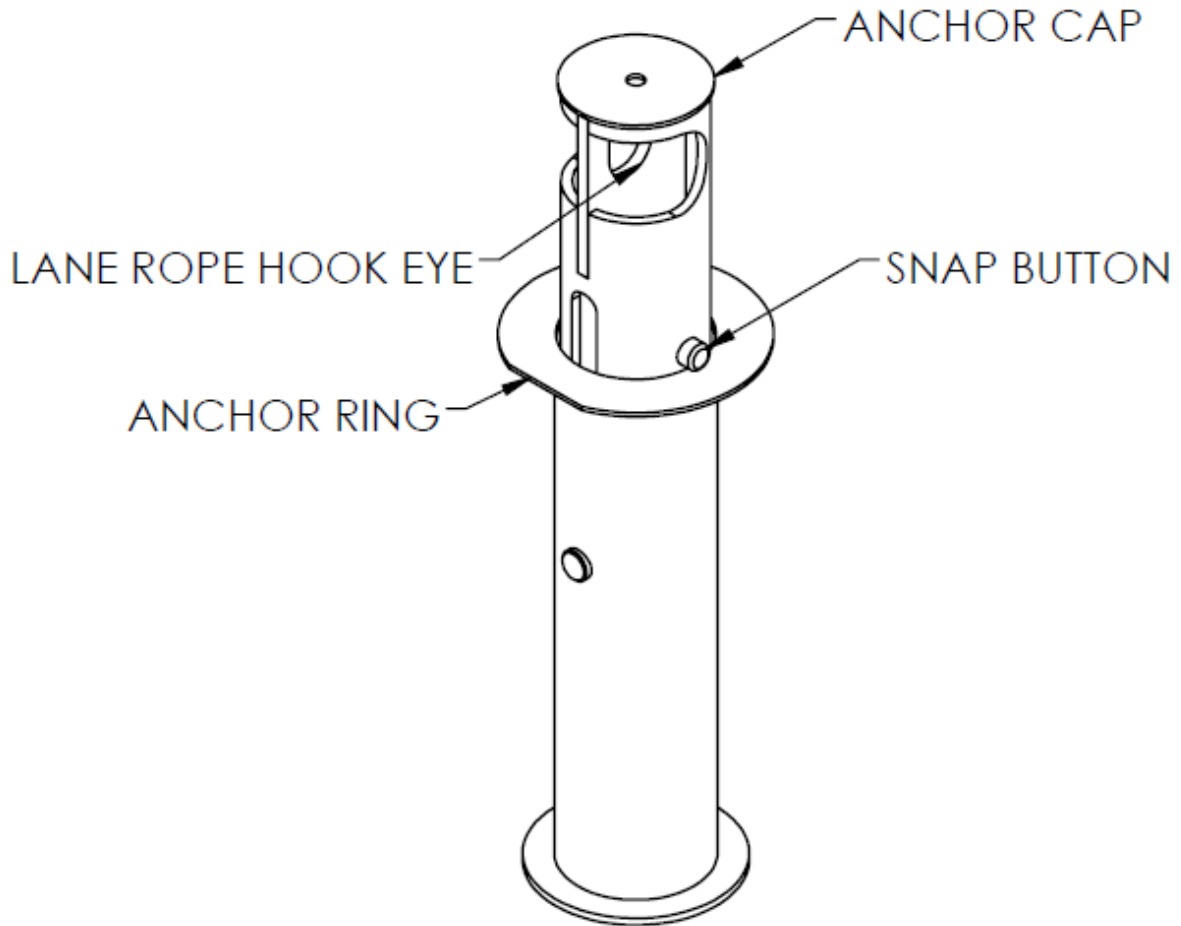


*** INCLUDED ANCHOR KEY**

Installation Overview

CAUTION: Do not install lane ropes until concrete has cured completely.

CAUTION: Flat portion of anchor ring must be parallel with the pool wall. Flat portion of anchor ring indicates the area in which lane ropes will be attached.


CAUTION: Ensure material surrounding anchor body is free of voids.

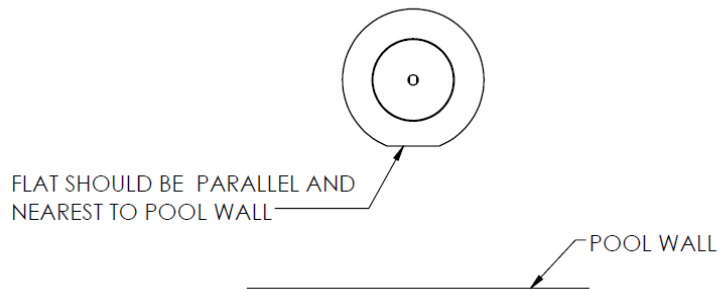

Retro-fit Anchor Installation

1. Determine the desired location for the anchor(s). Generally, the anchor locations will be determined by the building prints provided to Spectrum prior to fabrication of your rails. If this is the case, refer to the approved submittal drawings provided by Spectrum or to the building construction plans.
2. From the center of the desired anchor location, using a marking pen or chalk, mark a 12" x 12" square. This is the concrete to be removed to accommodate the installation of the compression anchor. It is recommended that the anchor be located at least 6" from any expansion joint, crack, drain, or similar structure in the concrete deck.
3. Use a concrete cutting saw; cut the 12" x 12" square out of the existing concrete deck. Using a heavy/sledge hammer to break the cut section of concrete – remove the section of concrete from the deck, see below.

Note: If the concrete deck is less than 6" thick, dig out the bottom of the hole to about 8" below the deck surface.

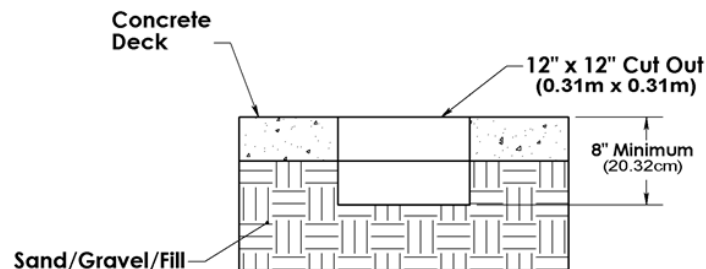

4. Locate a bonding source to bond (ground) the anchor. The steel rebar-bonding grid of the pool deck is the best choice for bonding the anchor. Attach a No. 8 solid copper wire (NEC Section 680-22) from the bonding bolt on the side of the anchor to the bonding grid.

Note: *If the concrete deck is 8" thick or more, an alternative anchor installation method may be used. In lieu of saw cutting the concrete deck, a concrete core drill may be employed to cut a 4" diameter hole at the desired anchor installation location. Epoxy or hydraulic cement may be used to secure the anchor in place. Make sure the anchor is properly bonded.*

The anchor should be covered before pouring concrete – preventing concrete from entering the anchor opening.

5. Fill the hole in the deck around the anchor with non-expanding concrete. Set the anchor so that the Anchor Cap is flush to the deck surface.
6. Use a level, to level the anchor making sure that it is vertically plumb in all directions.
7. Ensure that the straight edge of the anchor ring is parallel to the pool wall.
8. Allow the concrete to cure for at least 7-days before installing lane ropes.

New Construction Anchor Installation

1. Determine the desired location for the anchor(s). Generally the anchor locations will be determined by the building prints provided to spectrum prior to fabrication of your rails. If this is the case, refer to the approved submittal drawings provided by Spectrum or to the building construction plans.
2. Locate a bonding source to bond (ground) the anchor. The steel rebar-bonding grid of the pool deck is the best choice for bonding the anchor. Attach a No. 8 solid copper wire (NEC Section 680-22) from the bonding bolt on the side of the anchor to the bonding grid.
3. Secure anchor in place – proper height – anchor may be mudded in place. Set the anchor so that the finished top is flush with finished deck level.
4. Use a level to insure the anchor is vertically plumb in all directions.
5. Ensure that the straight edge of the anchor ring is parallel to the pool wall.
6. Place tape over the hole in the top of the anchor before pouring concrete deck – preventing concrete from entering the anchor opening.
7. Pour concrete deck and finish. Allow the concrete to cure for at least 7-days before installing lane ropes.

Usage:

Connecting to Anchor:

1. Insert included anchor key into the hole in the anchor cap and lift up.
2. The snap button should secure the anchor in the elevated position automatically.
3. Connect attachment hook into the eye on the anchor and tension connection.

Disconnecting and Anchor Storage:

1. Release rope tension and remove hook from the anchor eye.
2. Depress the snap button and allow anchor to drop back into the deck.

Care and Maintenance:

Your new Pop Up Anchor should be maintained in a manner consistent with all other pool area stainless products. Stainless steel products can be maintained in accordance with the following instructions.

The following should be performed periodically to ensure safe and dependable use.

1. Remove any discoloration with a 3M scratch pad (stainless steel components only). Wipe clean with a sponge dampened with Spectra-Clean™. Repeat these steps several times to passivate the stainless steel. Spectra-Clean™ kits are available from Spectrum (Part Number 152156). Do not spray with high-pressure water, only clean with non-chlorinated water.
2. Treat passivated items with a coating of Spectra Shield to enhance protection.

Troubleshooting

Any questions about your new Pop Up anchor can be answered by Spectrum Customer Service by calling 406.532.6321